



Mini Digital

USER GUIDE 1

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Please read instructions carefully to understand how to operate your Timex® watch. **Your model may not have all of the features described in this booklet.**

FEATURES

Time and Date (12/24-hour format) • 24-Hour Stopwatch • Daily Alarm • Hourly Chime



TO SET TIME / CALENDAR

1. Press **MODE** until Time Setting display appears – Seconds are flashing.
2. Press **ST/STP** to reset Seconds to zero.
3. Press **RESET** to go to Minutes (flashing).
4. Press **ST/STP** to increase Minutes. Press and hold **ST/STP** to change rapidly.
5. Press **RESET** to go to Hours (flashing).

NOTE:

- If the watch is set for 12-hour time format, "A" or "P" will appear to the right of Minutes to designate AM or PM.
 - If the watch is set for 24-hour time format, "H" will appear to the right of Minutes.
6. Press **ST/STP** to change Hours. Press and hold **ST/STP** to change rapidly. The setting will go from AM, to PM, to 24-Hour settings.
 7. Press **RESET** to go to Date (flashing).
 8. Press **ST/STP** to change Date. Press and hold **ST/STP** to change rapidly.
 9. Press **RESET** to go to Month (flashing).
 10. Press **ST/STP** to increase Month. Press and hold **ST/STP** to change rapidly.
 11. Press **RESET** to go to Day of Week (flashing).
 12. Press **ST/STP** to change Day of Week. Press and hold **ST/STP** to change rapidly.
 13. Press **RESET** to go to Seconds (flashing), or press **MODE** to exit Time Setting.

NOTE:

- Press **MODE** at any time to exit Time Setting

TO VIEW CALENDAR

In Time mode, press and hold **ST/STP** to see Calendar settings.

NOTE:

- "A" or "P" will appear next to Hours when the 12-Hour format is selected.
- No label appears next to Hours when 24-Hour format is selected.

TO TURN THE HOURLY CHIME ON/OFF

In Time mode, press and hold **RESET**, and then press **MODE** to turn the Hourly Chime ON or OFF

NOTE: The Days of Week all light to confirm that the Hourly Chime is active.

TO USE CHRONO

1. Press **MODE** to go to Chrono mode (one after Time mode)
2. Press **ST/STP** to begin the stopwatch operation.
3. Press **RESET** to record a split and "freeze" the display. The stopwatch continues to run in the background.

NOTE: If you press **ST/STP** to pause the stopwatch during the "frozen" display, press **RESET** again to show the current stopwatch reading.

4. Press **RESET** to release the "frozen" display and show the current stopwatch reading.
5. Press **ST/STP** to pause the stopwatch.
6. Either press **ST/STP** to resume stopwatch operation, or press **RESET** to reset the stopwatch to all zeroes..

NOTE: Records elapsed time up to 24 hours and shows 1/100 of seconds for the first hour.

TO SET DAILY ALARM

1. Press **MODE** to go to Alarm Setting mode (two after Time mode). Hours will be flashing.

NOTE:

- Alarm Set mode uses the same time format as Time mode.
 - If the watch is set for 12-hour time format, "A" or "P" will appear to the right of Minutes to designate AM or PM.
 - If the watch is set for 24-hour time format, "H" will appear to the right of Minutes.
2. Press **ST/STP** to change Hours. Press and hold **ST/STP** to change rapidly.
 3. Press **RESET** to go to Minutes (flashing).
 4. Press **ST/STP** to increase Minutes. Press and hold **ST/STP** to change rapidly.
 5. Press **RESET** to go to Hours (flashing), or press **MODE** to exit Alarm Setting.

NOTE:

- When the alarm sounds, it will beep for about 60 seconds.
- To temporarily stop the alarm beeping and snooze the alarm for five minutes, press **ST/STP**.
- To stop the alarm beeping altogether, press **RESET**.

TO TURN THE DAILY ALARM ON/OFF

In Time mode, press and hold **RESET**, and then press **ST/STP** to turn the Daily Alarm ON or OFF

NOTE: The ◀) symbol lights to confirm that the Daily Alarm is active.

WATER AND SHOCK RESISTANCE

If your watch is water-resistant, meter marking or () is indicated

Water-Resistance Depth	p.s.i.a. * Water Pressure Below Surface
30m/98ft	60
50m/164ft	86
100m/328ft	160

*pounds per square inch absolute

WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.

1. Watch is water-resistant only as long as lens, push buttons and case remain intact.
2. Watch is not a diver watch and should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water.
4. Shock-resistance will be indicated on watch face or caseback. Watches are designed to pass ISO test for shock-resistance. However, care should be taken to avoid damaging crystal/lens.

BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

**DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP
LOOSE BATTERIES AWAY FROM CHILDREN.**

TIMEX INTERNATIONAL WARRANTY

<http://www.timex.com/productWarranty.html>

©2019 Timex Group USA, Inc. TIMEX is a registered trademark of Timex Group USA, Inc. in the US and other countries.